

1 Handleiding installatie

Luik in bak



1. Vul strip (2x)
2. Buiten strip (2x)
3. hoekprofielen (3x, verschillend)
4. M6 bouten, moeren en ringen
5. Handgreep
6. Lak
7. Lijm

Stap 1: Afmeten

Leg een vul strip op de zijkant van de bak en meet vanaf de achterkant van de bak 25cm tot de strip. **Let op:** Verder naar achteren plaatsen geeft problemen met het bankje.



Stap 2: Aftekenen

Trek met een marker een lijn langs de buitenkant van de vul strip.

Stap 3: Uitzagen

Gebruik voor het zagen van het luik een decoupeerzaag met een zaagje van 2mm. Een zaagje met fijne vertanding geeft een beter resultaat. Vijl waar nodig bij voor een mooie afwerking




Stap 4: Lakken

Gebruik de lak om de gezaagde oppervlaktes te beschermen.

Let op: Laat de lak wel goed drogen.

2 Handleiding installatie

Luik in bak

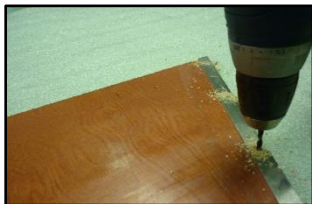

Stap 5: Gaten boren

Klem een vul strip op het luik en boor de gaten door in het houd, gebruik hiervoor een 6mm boor.

Stap 6: Monteren van de strips

Gebruik de meegeleverde bouten en moeren om de strips te monteren aan het luik. De vul strips moeten tussen het luik en de buiten strips komen te zitten.

Dit aan beide kanten.



Stap 7: Monteren van de hoekprofielen

Plaats nu de hoekprofielen in de bak. Deze zijn alle drie anders dus het is belangrijk dat alles goed past, alvorens ze vastgelijmd worden met de meegeleverde lijm.

Stap 8: Monteren van de handgreep

Klem het blokje hout aan de binnenkant van het luik en boor de twee 6mm gaten door. Bevestig het blokje met de meegeleverde bouten en moeren.



Stap 9: Slot gat

Wanneer gewenst kunt u het gat dat in de buiten strips zit doorboren en kunt u hier een slot plaatsen tegen diefstal van het luik.

3 Manual for installing the hatch in a cargo bike



1. Spacer strip (2x)
2. Outer strip (2x)
3. U profile (3x, all different)
4. M6 bolts, nuts and washers
5. Handle
6. Paint
7. Glue

Step 1: Measuring

Place a filler strip on the side of the box, at least 25cm from the back of the box.

Note: Placing the hatch any further back will result in issues with the bench.



Step 2: Marking

Use a marker to trace the outside perimeter of a filler strip.

Step 3: Sawing out the hatch

Use a jigsaw with a 2mm blade to saw out the hatch. Using a blade with fine teeth will result in a cleaner cut.

If necessary, use a file to clean up the cut.




Step 4: Painting

Shake to bottle of paint firmly. Now use it to seal all the sawn edges.

Note: Let the paint dry before proceeding.

4 Manual for installing the hatch in a cargo bike

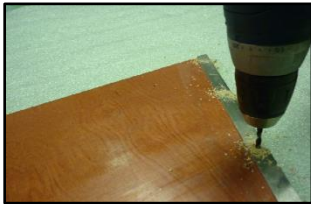

Step 5: Drilling the mounting holes
Use clamps to hold a filler strip to the hatch. Then drill out the holes using a 6mm drill.

Step 6: Mounting of the strips

Use the supplied bolts, nuts and washers to secure the strips to the hatch. The filler strips are sandwiched on both sides of the hatch by the outer strips.



Step 7: Mounting of the u profiles
Place the profiles in the box. They are all different so it is important to make sure it all fits properly. Now glue the in place using the supplied glue.

Step 8: Mounting of the handle

Use clamps to hold to handle to the hatch, now drill out the holes using a 6mm drill.



Step 9: Locking hole

If desired, the marked hole can be drilled out using a 6mm drill. This allows for a lock to be installed preventing theft of the hatch.